

# Tridonic Switch Start Ballast Selection Chart

Tridonic Part No.	ELG Ref	4W	2 x 4W	5W	6W	2 x 6W	7W	2 x 7W	8W	2 x 8W	9W	2 x 9W	10W	11W	13W	15W	2 x 15W	16W
EC4/8A27	938--0010E	X	X		X	X			X									
EC9A27	938--0011E			X			X				X			X				
EC13A27	938--0012E							X		X		X	2D		X			
EC15A502K	938--0013E															X		
EC16A27	938--0014E																	2D
EC18LC509	938--0015E																	
EC30/C501K	938--0017E																X	

Tridonic Part No.	ELG Ref	18W	2 x 18W	20W	2 x 20W	22W	24W	26W	28W	30W	36W	38W	40W	58W	65W	70W	75W	100W
EC18LC509	938--0015E	X		X			X	X	2D									
EC30/C501K	938--0017E					O				X								
EC36LC509	938--0018E		X		X						X	2D	XUO					
EC58C509K	938--0019E													X	X			
EC70C502K	938--0020E															X	X	
EC100A140	938--0021E																	X
40SC695454P	938--0018F												X					
65SC695464P	938--0019F														X			

Note: 2D = 2D Lamp / O = Circular Tube / U = U Tube

**Tel: 0870 445 0755 or Fax: 0870 445 0756**

Or call our Lamp and Gear sales hotline on 0870 445 0000